

Assembly Instructions

PARTS INCLUDED

- A** END PANELS (2)
- B** SIDE PANELS (2)
- C** CORNER PANELS (2)
- D** BRACKETS
- E** FIXINGS – M6x12 (8) M6x30 (20)


- Be careful not to cross thread fixings.
- Tighten all bolts when fully assembled.

- **ACS0600**
- **ACS1200**

ACS Protection Cages are usually installed vertically with two end panels and the mounting brackets fixed to the wall.

This provides protection on all sides and the base for wall hung equipment such as solar inverters.

The ACS0600 Cage can be installed either 600 high or 600 wide.

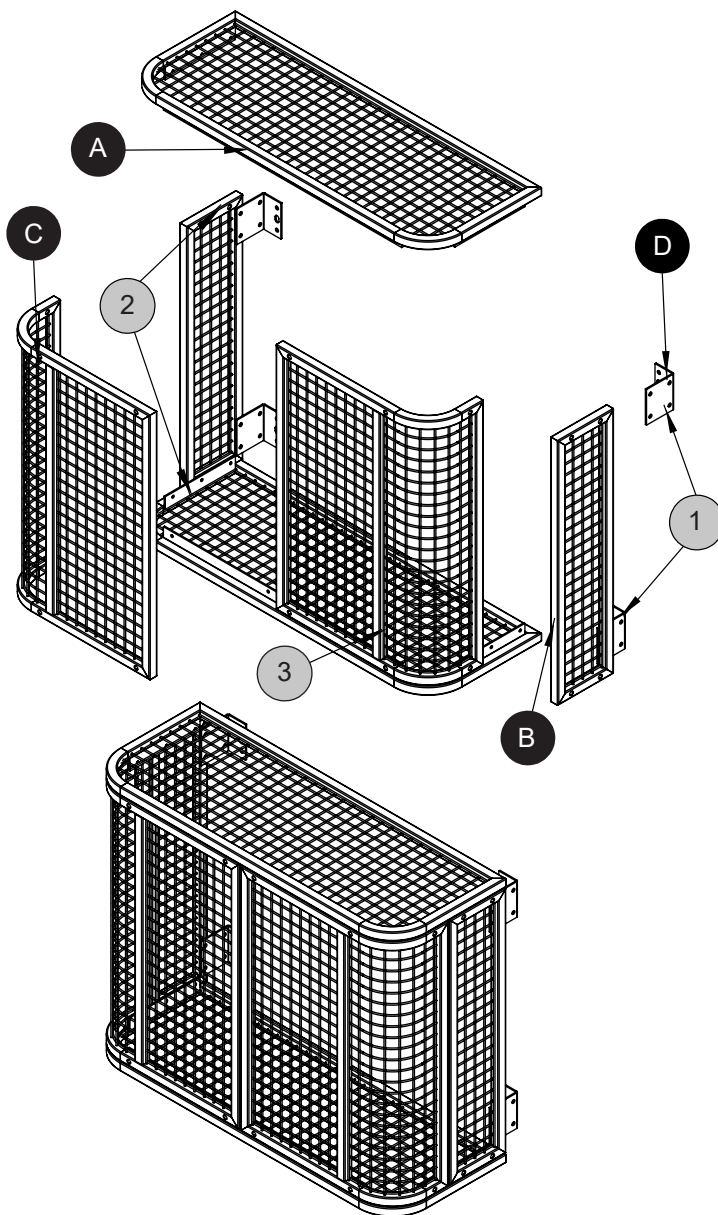

- 1** Attach the BRACKETS (D) to the SIDE PANELS (B) with M6x12 bolts. Optional holes allow the cage to be mounted to a wall or 25mm/50mm clearance for pipes & conduits.
- 2** Attach the SIDE PANELS (B) to the two END PANELS (A) using M6x30 bolts.
- 3** Attach one CORNER PANEL (C) to the END PANELS (A) using M6x30 bolts.
- 4** Position the protection cage and check the cage is level, both horizontally and vertically.
- 5** Fix the cage by using suitable anchors (not supplied) through the BRACKETS.
- 6** Add the remaining CORNER PANEL. Tighten all fixings to then complete the installation.